


iView2 - iSmart RS232 Communication Tutorial



This document illustrates the method to connect the iView2 Advanced HMI to the iSmart Intelligent Relay via the programming port.

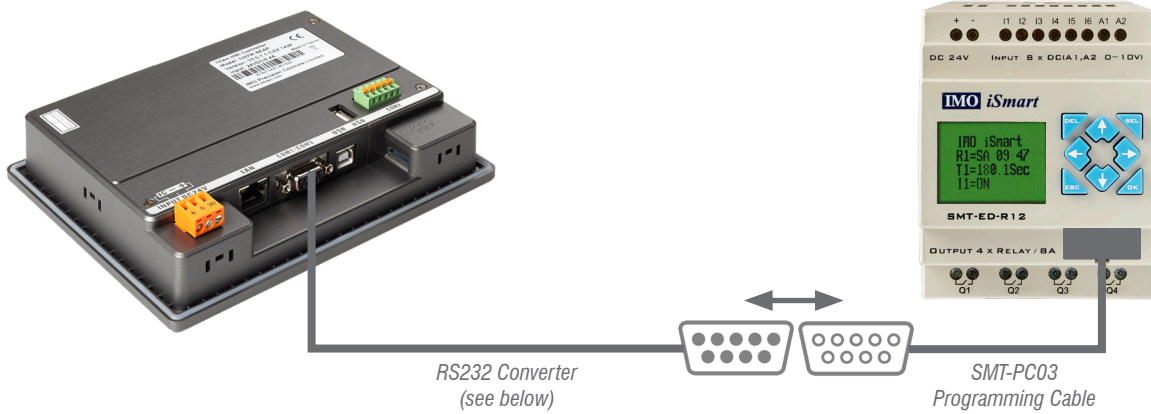


RS232 Converter Wiring Diagram

Male 9-pin RS232C Connector to iSmart Programming Cable


Male 9-pin RS232C Connector to iView COM1

Wire DB Type Serial Connector to iView COM1

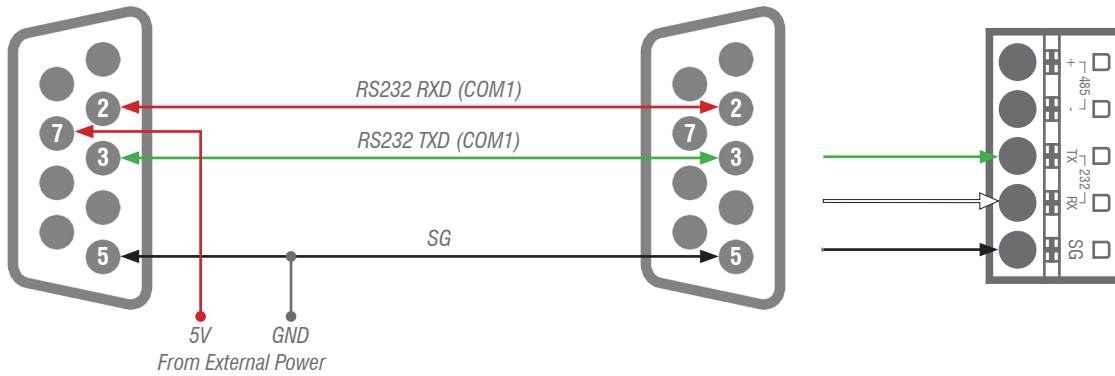

The 5V external power can be supplied from USB port or external 5V power supply. The USB port in the iView has 5V output which can be used to power-up.

USB Power Wiring Diagram

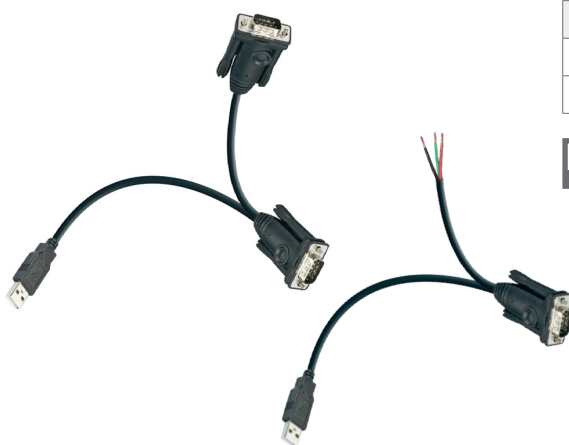

Pin	Signal	Colour	Description
1	Vcc	Red	+5V
4	GND	Black	Ground



www.imopc.com

IMO Precision Controls Ltd
Unit 3, The Interchange, Frobisher Way
Hatfield, Hertfordshire AL10 9TG UK

Tel: +44 (0)1707 414 444
Fax: +44 (0)1707 414 445

Email: sales@imopc.com
Web: www.imopc.com



Bespoke technical training courses
available at our Hatfield training facility.
Call 01707 414 444 for more information