

### VFR-015

**Fils Bornes**

- 1 GND
- 2 DI1
- 4 DI2

**Paramètres**

- F0.11 = 1
- F1.00 = 1
- F1.01 = 2

RAZ usine: Y0.00 = 3

### VFR-050 /-91

**Fils Bornes**

- 1 COM
- 2 DI1
- 4 DI2

**Paramètres**

- F0.11 = 1
- F1.00 = 1
- F1.01 = 2

RAZ usine: Y0.00 = 3

