

### VFR-015

Fils Bornes	Paramètres
1 GND	F0.11 = 1
2 DI1	F1.00 = 1
4 DI2	F1.01 = 3
6 DI3	F1.02 = 2 F1.10 = 2

RAZ usine: Y0.00 = 3

### VFR-050 /-91

Fils Bornes	Paramètres
1 COM	F0.11 = 1
2 DI1	F1.00 = 1
4 DI2	F1.01 = 3
6 DI3	F1.02 = 2 F1.10 = 2

RAZ usine: Y0.00 = 3

