V/RV

Manifold (5/2,5/3)

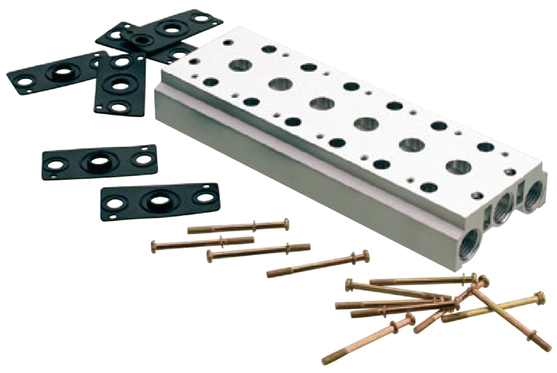

How to Order?

V	52	1	—	N	F
V Series	5 port, 2 position	1:1 series valve body 2:2 series valve body 3:3 series valve body 4:4 series valve body		1: 1 station 2: 2 stations 3: 3 stations …… 16: 16 stations	Manifold

Order Example:
* V series manifold for 5/2, 2 series valve body, 5 stations, Model: V522–5F

VBP	52	2
V series blind plate (for V series manifold)	5:5 port, 2 position	1:1 series valve body 2:2 series valve body 3:3 series valve body 4:4 series valve body

Order Example:
* Blind plate for 5/2 valve, 2 series valve body, Model: VBP–522

Note: 1.The dimensions of 5/3 way is same as 5/2 way series.
2.Blind plate assembly include: plate, gasket and screws.

Corresponding Application

Valve Model	RV5211/RV5212/RV5312	RV5221/RV5222/RV5322	RV5231/RV5232/RV5332	RV5241/RV5242/RV5342
Manifold Model	V521–NF(N≤16)	V522–NF(N≤16)	V523–NF(N≤12)	V524–NF(N≤7)

Main Dimension

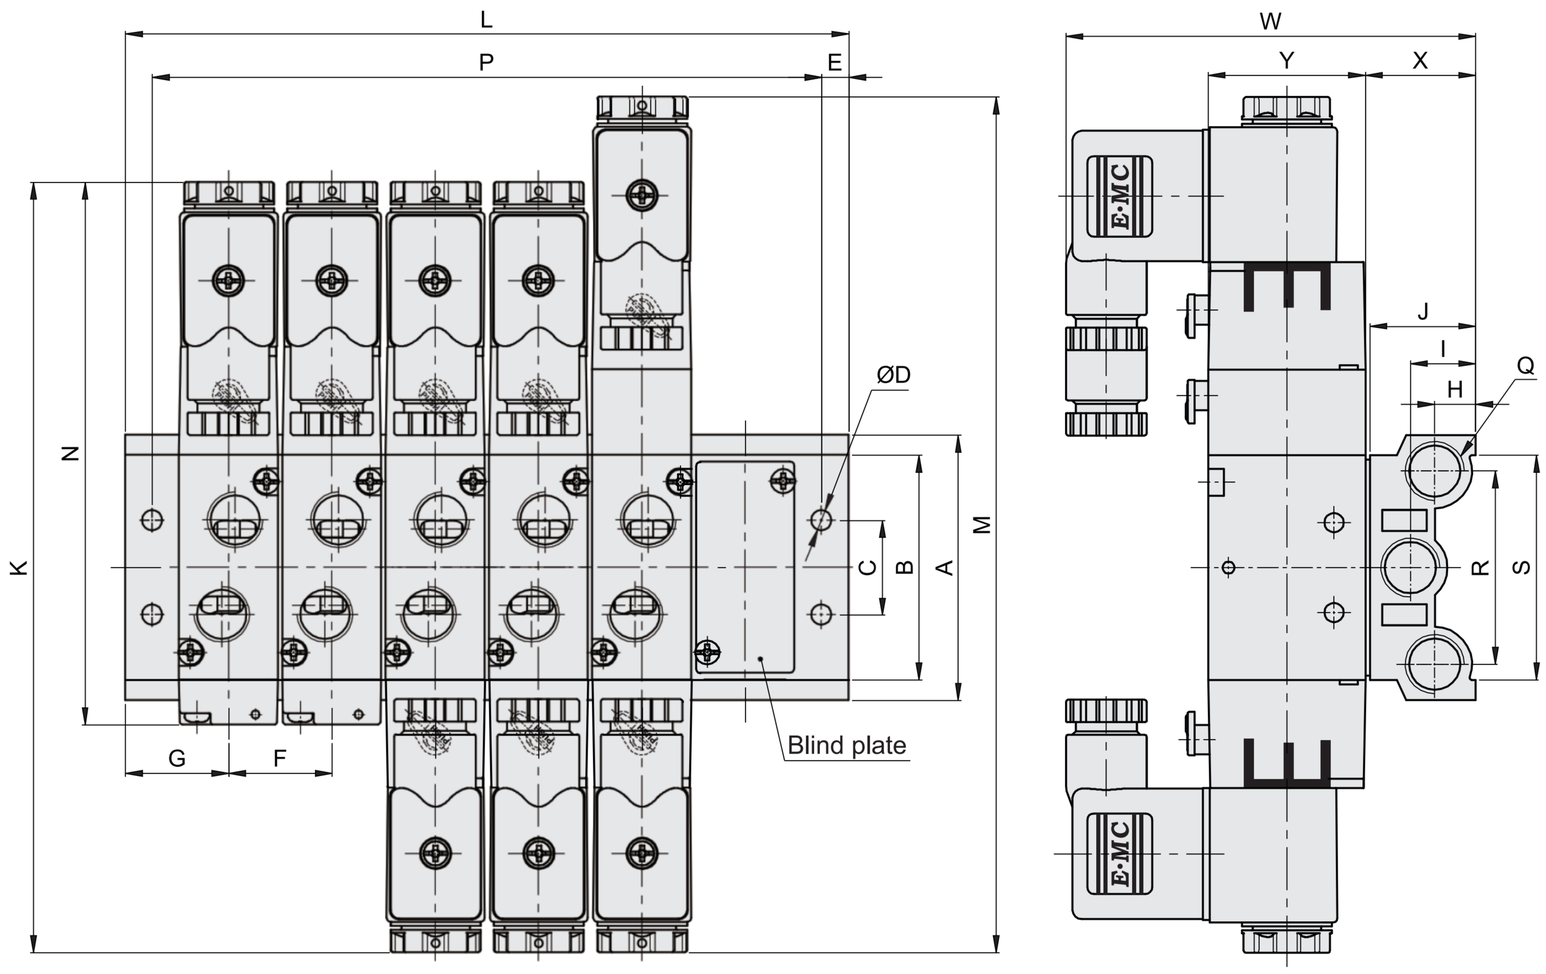

Model/Sign	L															
	1F	2F	3F	4F	5F	6F	7F	8F	9F	10F	11F	12F	13F	14F	15F	16F
V521-□F	38	57	76	95	114	133	152	171	190	209	228	247	266	285	304	323
V522-□F	46	69	92	115	138	161	184	207	230	253	276	299	322	345	368	391
V523-□F	54	82	110	138	166	194	222	250	278	306	334	362	–	–	–	–
V524-□F	63	98	133	168	203	238	273	–	–	–	–	–	–	–	–	–

Model/Sign	A	B	C	D	E	F	G	H	I	J
V521-□F	58	43	20	4.5	5	19	19	9.5	14	23
V522-□F	59	50	21	4.5	6	23	23	9.5	15	23.5
V523-□F	75	64	26	4.5	6	28	27	12	17.5	28
V524-□F	98	94	32	5.5	7	35	31.5	16	21.5	35

Model/Sign	P															
	1F	2F	3F	4F	5F	6F	7F	8F	9F	10F	11F	12F	13F	14F	15F	16F
V521-□F	28	47	66	85	104	123	142	161	180	199	218	237	256	275	294	313
V522-□F	34	57	80	103	126	149	172	195	218	241	264	287	310	333	356	379
V523-□F	42	70	98	126	154	182	210	238	266	294	322	350	–	–	–	–
V524-□F	49	84	119	154	189	224	259	–	–	–	–	–	–	–	–	–

Model/Sign	K	M	N	Q	R	S	W	X	Y
V521-□F	143.2	158.2	103.1	G1/4	40	49	79.2	24	27
V522-□F	171.4	190.4	120.7	G1/4	43	50	91.2	24.5	35
V523-□F	190.4	209.4	139.3	G3/8	53	67	98.2	29	40
V524-□F	223.4	244.4	168.7	G1/2	70.5	86.8	110.2	36	50